

# POWERFLEX®

## PART NUMBER

# PFF44-202G

## DESCRIPTION

### FRONT ARM REAR BUSH, CASTER ADJUSTABLE

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Caster Adjustable Polyurethane Bush Unit

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original rubber bush and outer shell from the front arm.
2. Clean any dirt and corrosion from the bore of the arm, and file off any sharp edges.
3. Push the caster adjustable polyurethane bush assembly into the bore of the arm from the top, so the lip sits on top of the arm as shown in figure 1.

**WARNING:** Do not press on the centre ball, press on the metal outer shell only otherwise you may damage the bush.

5. For maximum caster adjustment, rotate the centre sleeve with the supplied 27mm spanner so that the offset bolt hole is nearer to the inside of the car, as shown in figure 2. This setting is recommended for maximum steering feel improvement, but the caster can be adjusted to suit your preference.

6. Check and rectify all other wheel alignment parameters, and tension all hardware to manufacturers recommended torque settings.



Figure 1

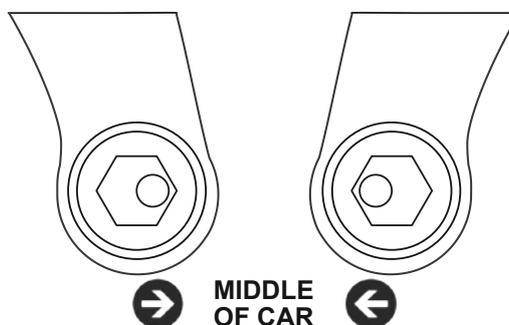


Figure 2