

POWERFLEX®

PART NUMBER

PFF50-403-20

DESCRIPTION

FRONT ANTI ROLL BAR BUSH TO CHASSIS BUSH 20MM

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original anti-roll bar bush from the bar, remembering to also clean away any dirt and corrosion.
2. Fit Polyurethane Bush A onto the bar, so it sits around the flat of the bar.
3. Apply some of the supplied grease to the outer surface of Polyurethane Bush A and fit Polyurethane B around Polyurethane A. This will create a rotating 'bearing' type design.
4. Refit assembly into the anti roll bar bracket, remembering to tension all hardware to manufacturers recommended torque settings.



Polyurethane Bush B

Polyurethane Bush A

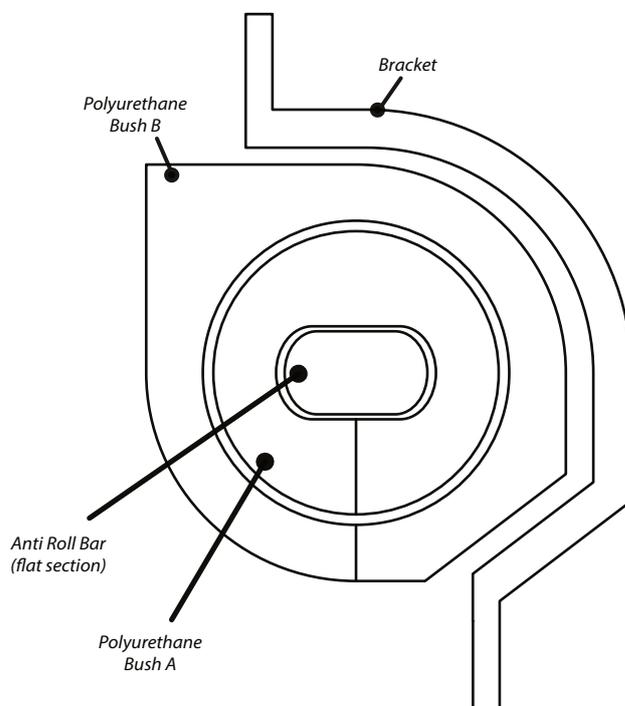


Figure 1- Assembly side profile