



PART NUMBER

**PFF57-406**

DESCRIPTION

**Front Strut Top Mount Bush**

**INSTALLATION GUIDE**

**Contents (parts per pack):**

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease

2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

**Fitting Instructions:**



1. Remove the front struts from the vehicle.
  2. Compress the spring using spring compressors.
  3. Remove the top shock nut from the strut, take note of the configuration of the parts, as shown in figure 1.
  4. Press the polyurethane bush into the shock absorber bearing.
- Tip: Apply some washing up liquid to the bush to ease the fitment of the bush.**
5. Apply some of the supplied grease to the bore of the bush.
  6. Insert the sleeve into the bore of the bush.
  7. Refit in the reverse of the assembly order to re-assemble the strut.
  8. Tension all hardware to manufacturers recommended torque settings.

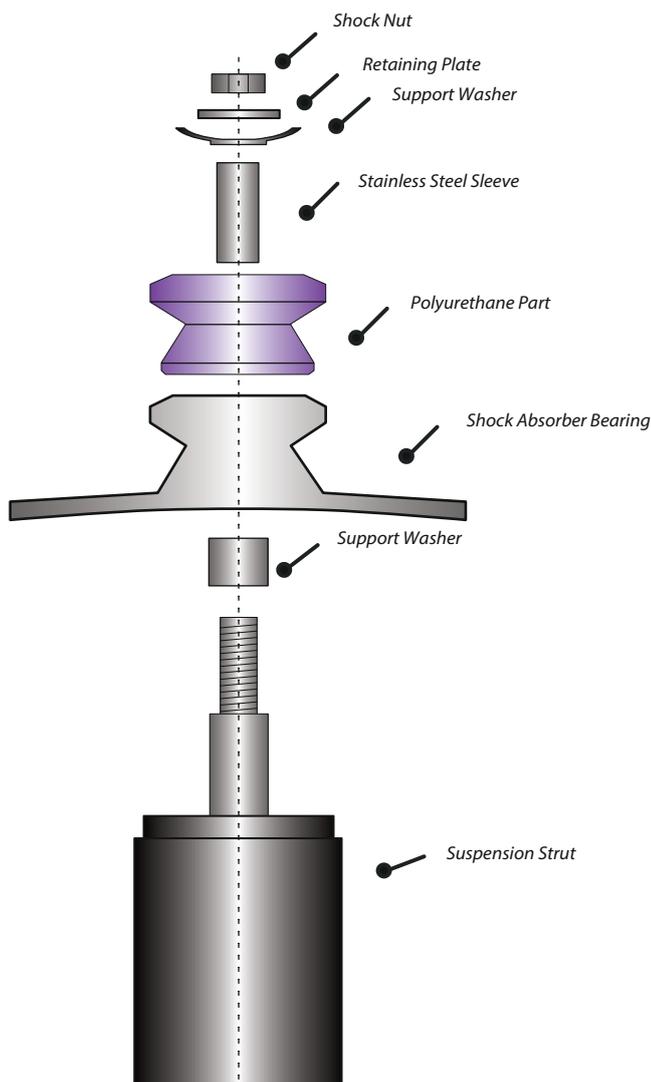


Figure 1

Figure 1