


*Fitting instructions
Rover PFF63-401*


**FRONT
OF CAR**

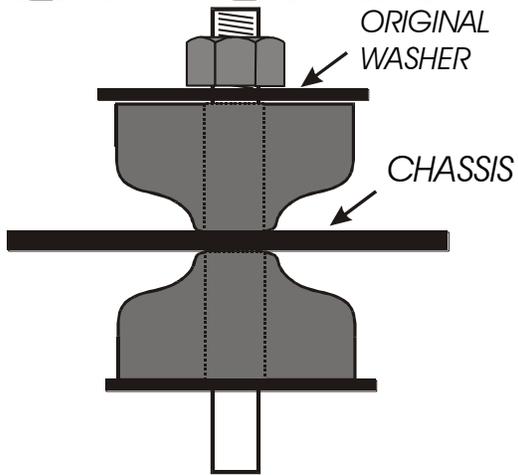

Assemble the bush kit PFF63-401 as shown. Use original washers.

*Fitting instructions
Rover PFF63-401*


**FRONT
OF CAR**

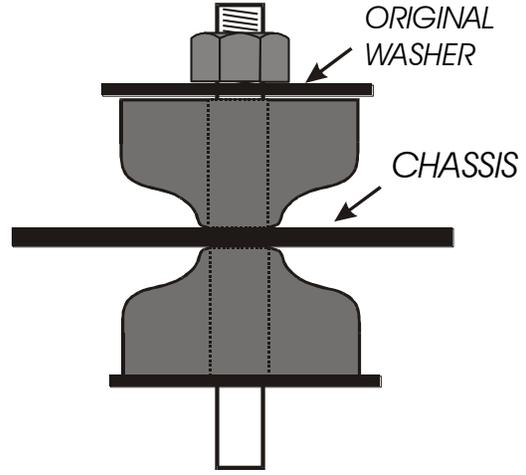

Assemble the bush kit PFF63-401 as shown. Use original washers.

*Fitting instructions
Rover PFF63-401*


**FRONT
OF CAR**

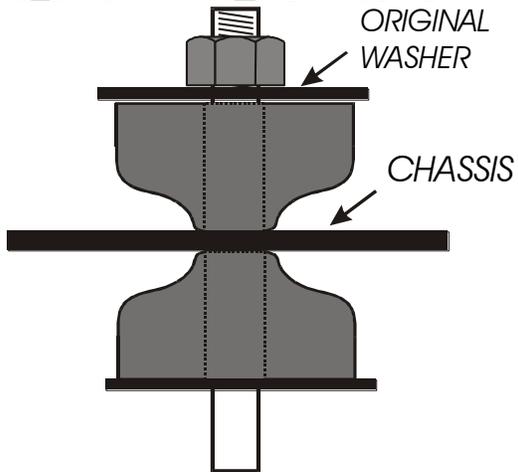

Assemble the bush kit PFF63-401 as shown. Use original washers.

*Fitting instructions
Rover PFF63-401*

**FRONT
OF CAR**

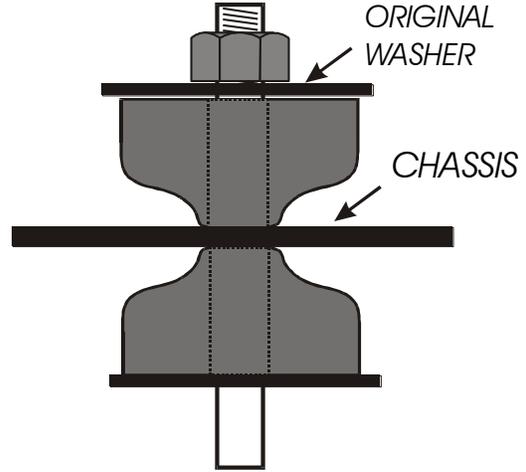

Assemble the bush kit PFF63-401 as shown. Use original washers.