

# POWERFLEX®

## PART NUMBER

# PFR69-831

## DESCRIPTION

### REAR DIFF REAR RIGHT MOUNT INSERT

## INSTALLATION GUIDE

### Contents (parts per pack):

1 x Polyurethane Insert      1 x PTFE/Silicone Grease  
2 x Mild Steel Washers, 1 x Small & 1 x Large

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Support rear diff. Remove the bolt from the right hand rear mount.
2. Apply some of the supplied grease to the legs of the insert.
3. Push the insert into the voids, if the insert won't go in fully there may be a very thin rubber flashing 3/4 of the way down the voidings. This will need to be trimmed out of the way if the insert won't push through it.
4. Place the smaller supplied washer into the hole of the insert then the larger washer.
5. Refit all bolts and tighten to manufacturers' recommended torque settings.

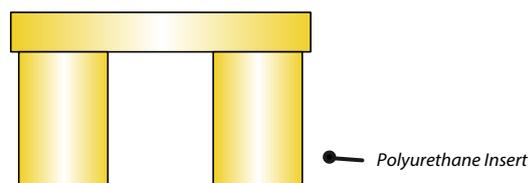


Figure 1



Figure 2